

**Instruction for the Rotisserie accessory equipment P 409**  
**Protected by utility patent GBM 20 2011 107 401.7**  
**State 10/2012**

Our Rotisserie P 409 is intended to use as a garden barbecue fireplace and as a rotisserie at the same time. Two holders will be fixed laterally at either side of the barbecue fireplace secured with screws. The loaded spit is placed on the holders and the motor inserted. The longitudinal slot in the holders enables the spit to be moved backwards and forwards to maintain the desired heat.

The fat catcher is furnished with a drain slope which reaches into the combustion chamber and prevents the ignition of dripping fat.

A barbecue claw is provided and has been designed such that it dispenses with the need for the conventional fastening screw. This claw is integral on the spit and does not separate from the grilled food during barbecuing.

After disassembly, the 4 anchors and screws stay inside the chimney wall. Immediately it can be used as an open fireplace again.

The device can be used as original equipment or retrofit kit.

This complete set Rotisserie P 409 is designed for customary garden fireplaces with an outside width of 800 mm.

**1. General safety guidelines**

**Device security**

**Mains connection**

**Cleaning**

**2. Unpacking and controlling**

**3. Items included in kit**

**4. Comfort Accessories**

**Salmon board**

**5. Assembly instructions**

**Quick assembly holder**

**Basic assembly**

**6. Barbecue examples**

**Crispy roast pork**

**Chicken**

**Beef Shashlik**

**Salmon half**

**7. Manufacturer's details**

**1. General safety guidelines**

- Before using your device, please read these instructions carefully. They contain important information about your safety, use and care of your device. Any documents supplied with the device should always be kept readily available for use.

- Never leave the device unattended.

- This device is destined for use in private households. It is not intended for commercial use.

- Children are to be supervised in order to make sure that they do not play with this device.

- This device is not intended to be used by persons (including children) with limited physical, sensory or mental aptitude or lack of experience and/or knowledge unless they

are supervised by a person responsible for their safety and have received instruction from this person as to how the device is used.

- Packaging material is not a toy for children. The packaging material may cause suffocation of children. Please keep packaging material away from children.
- To avoid possible injury use enclosed assembly gloves.

### **Device security**

Before and also during every operation check the proper function including all accessories. Replace defective or damaged components. Make sure all fasteners are properly tightened. Only use accessories that are recommended by the manufacturer for your device.

### **Mains connections**

- Available supply voltage must agree with the information on the packaging.
- To disconnect the device from the power supply grid pull out the plug.
- When connecting electrical appliances in the vicinity of the fireplace, ensure that the power cables do not touch the hot fireplace, the open fire or heated accessories.
- Avoid damage of the power cable by bending and contact with sharp edges.
- Disconnect the mains plug from the supply when the device is not in use, in case of a malfunction, before mounting or removing accessories and before cleaning.

Attention!

All parts of rotisserie P409 may heat up during operation.

Warning!

Do not make any modifications to the device. Use the device only for the intended purpose. Unreasonable use can cause hazards.

### **Cleaning**

Be careful while cleaning the device to avoid injuries and damages. Wait until the device has cooled down before cleaning.

Soiling should be cleaned as soon as possible after using. All parts are dishwasher-safe except for the motor.

Do not immerse electronic parts of the device in water or any other liquids for cleaning. The motor should never be held under running water.

If any problems arise which are not reflected in detail in this manual: Use your common sense or contact the manufacturer.

## **2. Unpacking and controlling**

Carefully unpack the unit and accessories.


Keep the packaging for storing the device or for subsequent transportation.

If the packaging is discarded, then observe the local legislative disposal instructions.

Check the contents of the packaging for completeness and check the device for damage. If some parts are missing or damaged please do not put the device into operation and contact the manufacturer.

### 3. Items included in kit

- 2 units	Holder	1.4301
- 1 unit	Spit	1.4301
- 1 unit	Fat catcher	1.4301
- 4 units	Claw	1.4301
- 1 unit	Salmon board	1.4301
- 4 units	Spit nail	1.4301
- 4 units	Hex. screw	1.4301
- 4 units	Anchor	steel galv.
- 1 unit	Motor	1,5 V
- 1 pair	Assembly gloves	Nitril
- 1 unit	Drilling template	cardboard
- 1 unit	Instructions for use	Paper
- 1 unit	Packaging	cardboard

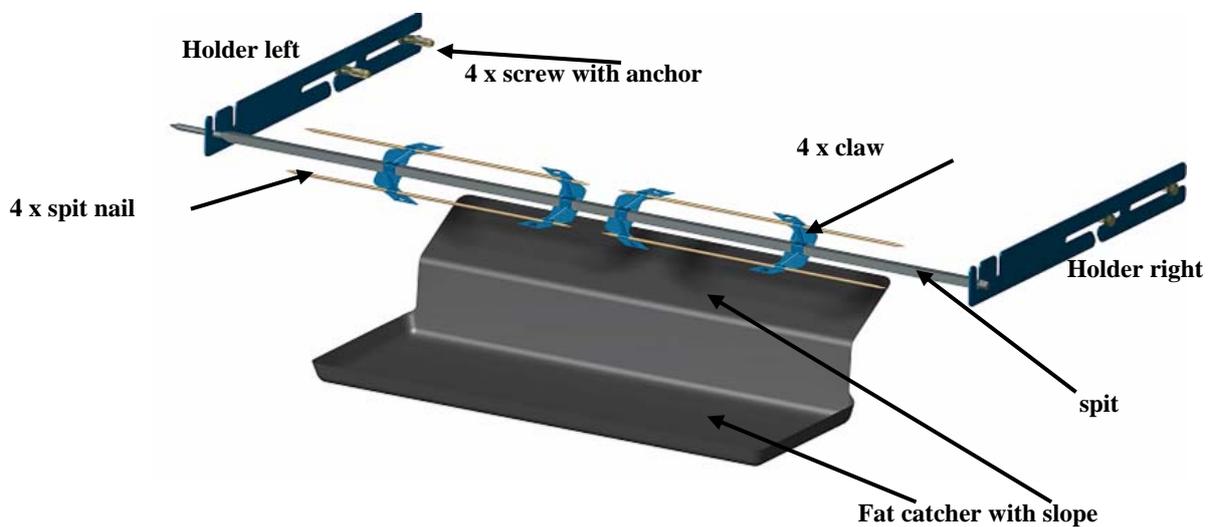

#### Claw



Depending on the centred form-fit connection with the spit, the barbecue turns without slippage.


Both upright points interlock with the barbecue and can be pulled out without any problems after cooking. In case you can fix the barbecue with spit nails which you can push into the claw.

#### Grill motor



1,5 Volt grill motor, can be used left and right sides, alternative battery operation (batteries not included)

#### 4. Comfort accessories salmon board

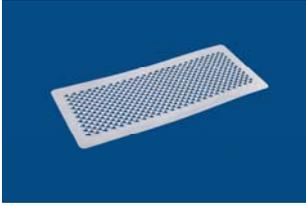

The salmon board offers an additional function for the Rotisserie P 409: Problem-free option of grilling fish.

#### 5. Drilling template

Mark holes with enclosed drilling template left and right at the fireplace each twice.  
Impact drilling Ø 8mm, 30 mm deep or drilling through.

Flush punching in of the anchor 8 x 24.

Insert screws M6 x 25 and let protrude out approx 4-5 mm.

Tip apply soap, oil or grease to the screws.



#### Quick assembly holders

Holder left:

- Adjust the holder with the rear oblong hole diagonally from above behind the rear screw head up to the half until vertically mounting slot is positioned above the front screw head
- push down behind the front screw head

Holder right

- As holder left

Dismantle vice versa.



#### Basic assembly

- Lay spit into the provided slot at the holder
- Attach motor
- Fit fat drain catcher (let reach slope into combustion chamber)
- Attach claws with food
- Adjustment track of spit up to 90 mm to give even heat

## 6. Barbecue examples

Please consider in all examples, that cooking time depends on the heat of the glow and the weight of the food. However it is shorter than with conventional cooking methods (oven, barbecue, pan etc.).



### **Crispy roast pork**

Cut rind horizontally and vertically. Season to your own taste.

After 60 minutes 2 kg meat crispy on the outside, juicy on the inside depending on the heat.

To guarantee run-out accuracy additionally fixed with 2 spit nails Ø 3 x 300



### **Chicken**

Up to 3 chickens can be grilled side by side. Season to your own taste.

Additionally fixed with 4 spit nails.



### **Beef Shashlik**

Beefsteak roasting spit with peppers, onions, and fennel. Cooked medium after 20 minutes. Fixed by square spit without claws and spit nails.



### **Salmon half**

Lay salmon half with skin down on the high standing points of the salmon board. Press around the outer edges to fix it on the board. Attach salmon board to the intended recesses at the metal tub and support it on the spit.

## **7. Manufacturer's details**

**EU Fördertechnik GmbH**

**Am Neumarkt 52**

**D - 42651 Solingen**

**Tel: 0049 212 / 4 16 76**

**Fax: 0049 212 / 4 92 76**

**Net: [www.P409.de](http://www.P409.de)**

**[www.P409.eu](http://www.P409.eu)**

**Mail: [info@P409.de](mailto:info@P409.de)**

**Chairman: Wilhelm Eudenbach**

**USt.-ID.Nr. / VAT no.: DE 813233198**

**Commercial register: District court Wuppertal HRB 16458**

**Bank:**

**Stadt-Sparkasse Solingen**

**Acc. no. 5315080**

**Code no. 342 500 00**

**SWIFT-BIC SOLSDE33**

**IBAN DE52 3425 0000 0005 3150 80**

**Technical modifications reserved.  
Copyright and patents apply**